



**RadioPopper JrX CE Radio Wireless  
Owners Manual**

RadioPopper is owned by Leap Devices, LLC in Vancouver, WA. This product was designed, produced, and manufactured in the USA.

**TECHNICAL & REGULATORY NOTICE:**

**Frequency:** DSSS 868.000 MHz - 868.600 MHz

**Power & Duty Cycle:** Less than or equal to 25 milliwatts, duty cycle less than or equal to 1%.

RadioPopper JrX CE Transmitter

RadioPopper JrX CE Receiver

Brand Name: RadioPopper

Manufactured By: Leap Devices, LLC, Vancouver WA, USA

\* A camera shutter should not be activated more than 20 times per second while a JrX Transmitter is powered on and attached to the camera body to ensure a 1% transmission duty cycle is not exceeded per regulatory requirements.

\* The JrX Receiver CE is a category 3 device per EN 300 220-1 [4.1.1]



This product has been tested and found to conform to R&TTE Directive 1999/5/EC on basis of conformance with:

EN 301 489-1:2008, EN 301 489-3:(2002-08)

EN 300 220-1:2006, EN 300 220-3:(2000-09)

EN60950-1:2001, EN60825-1:2001



This product is labelled in accordance with European Directive 2002/96/EC concerning waste electrical and electronic equipment (WEEE). The Directive determines the framework for the return and recycling of used appliances as applicable throughout the European Union. This label is applied to various products to indicate that the product is not to be thrown away, but rather reclaimed upon end of life per this Directive.



This product is RoHS compliant.

# Table of Contents

---

## **PRODUCT PATENT(S) PENDING**

<b>Introduction</b> .....	<b>4</b>
<b>Specifications and Warnings</b> .....	<b>6</b>
<b>Parts Descriptions</b> .....	<b>8</b>
<b>Installation</b> .....	<b>10</b>
<b>Control Switch Reference</b> .....	<b>12</b>
<b>Advanced Operation</b> .....	<b>15</b>
<b>EZset Operation</b> .....	<b>17</b>
<b>EU Declaration of Conformity</b> .....	<b>19</b>
<b>Limited Warranty</b> .....	<b>20</b>

# RadioPopper JrX Radio Wireless System

---

## Introduction

Thank you for your purchase of the RadioPopper JrX wireless radio system. We hope you'll find this system to be a valuable tool in your creative lighting, giving you flexibility and control never before possible.

The RadioPopper JrX system is a high quality and highly reliable radio triggering system. The JrX provides long range triggering of lighting equipment, as well as integration and compatibility with RadioPopper PX units. The JrX is also forward compatible with upcoming "X System" devices.

Please read this short manual entirely before installing or operating your RadioPopper JrX wireless system. Your JrX units ship in default configuration providing the most intuitive "out of the box" experience. The units are pre-set to the most commonly used settings. This manual will help you use the more advanced optional features of the JrX units when necessary.

If you have any troubles along the way, feel free to call or email.

360.713.0776  
support@radiopopper.com



# RadioPopper JrX Radio Wireless System

---

## Compatible Hardware:

The JrX System has been tested and found to be compatible with the following flash hardware.

### Transmitter:

May be used with any camera with a standard hotshoe mount. May also be used via an external PC Sync cable appropriate to your particular brand of camera. The external sync port on the transmitter accepts a standard 3.5mm mono or stereo male plug. The sync voltage is approximately 3 volts - safe for use with all current model cameras.

### Receiver General Triggering:

JrX Receiver will trigger most lighting devices via the standard sync connector. The sync connector accepts a standard 3.5mm mono or stereo male plug.

### Receiver Data Port Triggering:

JrX Receiver version enables the 'telephone' style Data Port. This port is compatible with all current model studio lighting system from Alien Bees, White Lightning, and Zeus.

### PX Triggering / Receiving:

Note: *Triggering PX Receiver units with JrX Transmitter units requires firmware version 6-04 or later on the PX Receiver.* If a firmware upgrade is required on your PX Receiver, contact us for more information.

The JrX Transmitter will trigger PX Receiver units (firmware 6-04 or later) tuned to the same radio channel. The PX Transmitter (all firmware versions) will trigger JrX Receiver units tuned to the same radio channel.

## Specifications:

### Transmitter Specifications

**Dimensions :** 1.75" x 2.25" x 1.25" (45mm x 57mm x 30mm)

**Weight:** 1.7 ounces / 48 grams (Including battery and antenna during normal operation)

**Battery:** One "CR123" Size Battery, 3.0 volt, including rechargeable and non-rechargeable.

**Battery Life:** Approx 50 Hours total power-on time per battery.

**Radio Frequency:** 868-868.6 Mhz, <25 mW, <1% Duty Cycle

**Radio Range:** 300 ft to 1750 ft depending on conditions and environment.

**Maximum Sync Speed:** 1/250 Shutter Speed for cameras having leaf shutters.

### Receiver Specifications

**Dimensions :** 4.0" x 1.75" x 1.2" (100mm x 45mm x 30mm)

**Weight:** 1.9 ounces / 53 grams (Including battery and antenna during normal operation)

**Battery:** One "CR123" Size Battery, 3.0 volt, including rechargeable and non-rechargeable.

**Battery Life:** Approx 50 Hours total power-on time per battery.

**Radio Frequency:** 868-868.6 Mhz, <25 mW, <1% Duty Cycle

**Radio Range:** 300 ft to 1750 ft depending on conditions and environment.

## Specifications and Warnings

---

### **WARNING!!! WARNING!!! WARNING!!!!**

PLEASE read this section in detail for important warnings and notices.

#### **INSERT THE BATTERY IN THE CORRECT DIRECTION!**

Inserting the batteries “backwards” could possibly damage the electronic components inside JrX Transmitter and JrX Receiver units. The little “bump” on the CR123 points down when inserting. A graphic is provided at the base of the battery holder. Further, you should observe for the Green Power LED light after you insert the battery - indicating proper insertion.

#### **DO NOT REMOVE OR TAMPER WITH THE CIRCUIT BOARD!**

Some of the components inside your JrX Transmitters and JrX Receivers are especially susceptible to electrostatic shock (they’re easily ‘zapped’ by static electricity) - just touching them could damage them. Your circuit board is grounded to the case - as long as it’s not removed everything is safe. Removing or tampering with your circuit board will promptly void your warranty.

#### **YOUR POPPERS CAN’T SWIM!! KEEP THEM DRY!!**


JrX units are not waterproof. Don’t use them outside in the rain, to photograph objects under water, or in any other environment that may allow water to enter the physical enclosure or battery area.

If you dunk them, it may be too late. Should you do manage to expose a RadioPopper to anything wet, remove the battery as quickly as possible and allow it 24 hours to dry. You may find it has come back to life. Allowing anything wet inside the case of your JrX Transmitter or JrX Receiver will promptly void the warranty.


#### **CONTACT US IF YOU GET CONFUSED!**

You’re a valued customer and we really do care about you. (And not in that automated “your call is very important to us but we’re going to leave you on hold for an hour anyway” customer service recording sort of way). Seriously, if you have questions, we’re going to do everything possible to take care of you as quickly and as personally as possible. The phone number is on our website and you can always email us at [support@radiopopper.com](mailto:support@radiopopper.com)

## JrX Transmitter - Top View

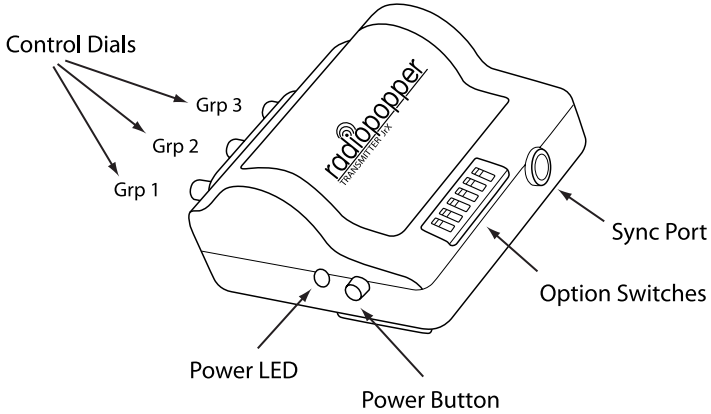


## JrX Transmitter - Bottom View

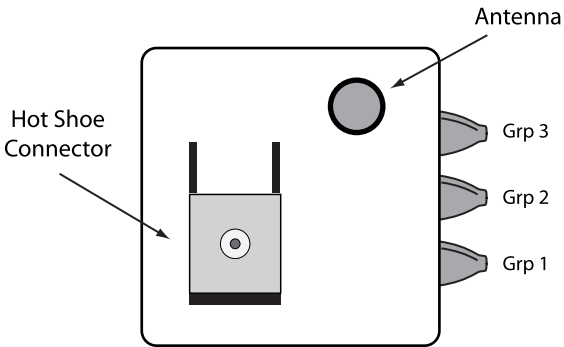



## JrX Receiver

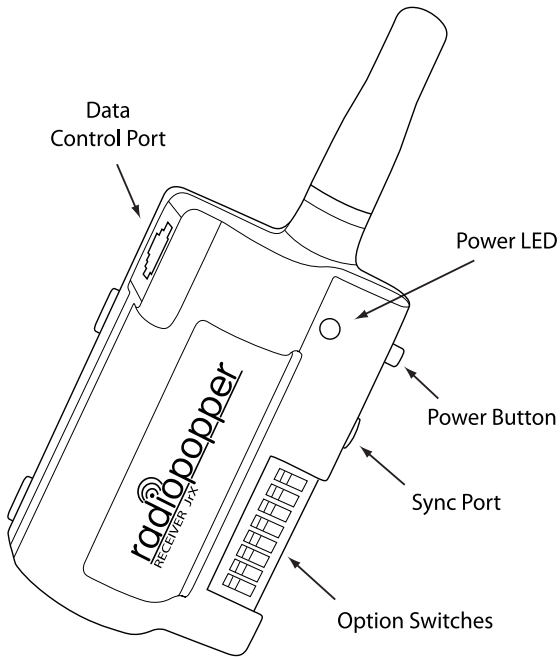

# RadioPopper JrX Radio Wireless System

---

## Installation & Basic Operation: RadioPopper JrX Transmitter

- 1)** Remove the battery compartment door by sliding it off on the top side of the unit. Insert a single CR123 Lithium battery. Take care to follow the direction / polarity indications printed inside the battery clip. Secure the battery by pressing it straight down into the clip - it will click into place. Replace the battery compartment door.
- 2)** To power on the JrX Transmitter, press and hold the power button for approximately two seconds. The Power LED will light to indicate the unit is powered on and operational.
- 3)** You may trigger the JrX Transmitter in one of two ways. You may either slide the transmitter onto your camera's hot shoe connector, in which case the JrX Transmitter will activate and broadcast a trigger signal each time you activate your camera's shutter. You may optionally connect a sync cord to the sync port provided on the side of the JrX Transmitter. Activating this sync cord will also cause your JrX Transmitter to activate and broadcast a trigger signal.
- 4)** Configure the option switches as required to set your desired channel and options. Please refer to pages 13 and 15 for instructions and reference as to the proper settings of the option switches.
- 5)** On the JrX Receiver, you may adjust the light intensity level of up to three groups of remote lighting devices using the group adjustment dials on the side of the JrX Transmitter unit. When installed on a camera hot shoe with the Power button and Power LED facing toward you, the closest dial to you is Group 1, the middle dial is Group 2, and the furthest dial from you is Group 3. Turn the dials counter-clockwise ("away from you") to increase lighting intensity level, turn them clockwise ("toward you") to decrease the lighting intensity level. Please refer to pages 14 and 17 for instructions and details regarding the use of the group adjustment dials.
- 6)** You may tap the Power button one time to send a test shot and to perform a battery level check. The Power LED will strobe at one of three speeds, faster to slower, depending on current battery level. A slow constantly blinking LED indicates low battery and you have approximately one to two hours of battery life remaining.
- 7)** Press and hold the Power button for approximately two seconds to power off the unit. When the unit powers off the Power LED will go dark.

# Installation

---

## Installation & Basic Operation: RadioPopper JrX Receiver

**1)** Remove the battery compartment door on the top side of the unit. Insert a single CR123 Lithium battery. Take care to follow the direction / polarity indications printed inside the battery clip. Secure the battery by pressing it straight down into the clip - it will click into place. Replace the battery compartment door.

**2)** Connect the JrX Receiver to your lighting equipment - a studio strobe unit, power pack, mono light, or battery powered strobe unit. Connect the appropriate cable between the Sync Port on the side of the JrX Receiver to the trigger port or hot shoe connector of your lighting equipment. The cable that inserts into the JrX Receiver is a male 1/8" mini-phon plug. The sync port accepts mono or stereo type connectors. If you are using White Lightning, Alien Bees, or Zeus brand studio lights, you may optionally attach the light via the RJ-11 / Telephone style Data Port connector provided on the JrX Receiver. NOTE: The Data Port connector is only enabled in the "Studio" version of the JrX Receiver. This port is NOT enabled in the "Basic" version of the JrX Receiver. For more information about the use of the Data Port to control compatible studio lights, please refer to the section on page 12.

NOTE: If using the Data Port Connector, it is NOT necessary to connect an additional cable to the Sync Port to achieve activation of the attached light. However, some lights provide an optical slave triggering function where they will activate when observing light from other sources. When using a light with an optical slave, connected by the Data Port connector, and being used in conjunction with PX units include ETL or iTTL type communications, it is important to disable the optical triggering function by placing a plug or connector in the sync port of the light itself.

**3)** To power on the JrX Receiver, press and hold the power button for approximately two seconds. The Power LED will light to indicate the unit is powered on and operational. The JrX Receiver will perform a self-test and will activate the attached light one time. If a JrX Receiver unit is attached to compatible lighting via the Data Port, you will see the modeling lamp of that light cycle up and down during this self test. The self test is complete in approximately two seconds. The unit then enters normal operation.


**VERY IMPORTANT:** When using a JrX Receiver to control the levels of studio lights using the Data Port, the JrX Receiver must be connected to the light BEFORE turning on the JrX Receiver. The controlled light will "see" the JrX Receiver during the self test. If not powered on while attached to the controlled light, the controlled light may not respond level adjustments from the JrX Receiver.

**4)** Configure the radio channel, group setting, and other settings using the Option Switches. Please refer to page 12 for details as to the settings of these switches.

**5)** Tap the Power button one time to cause the attached light to emit a test fire.

**6)** To power off the unit, press and hold the Power button for approximately two seconds until the Power LED goes dark.

Channel Switch Positions

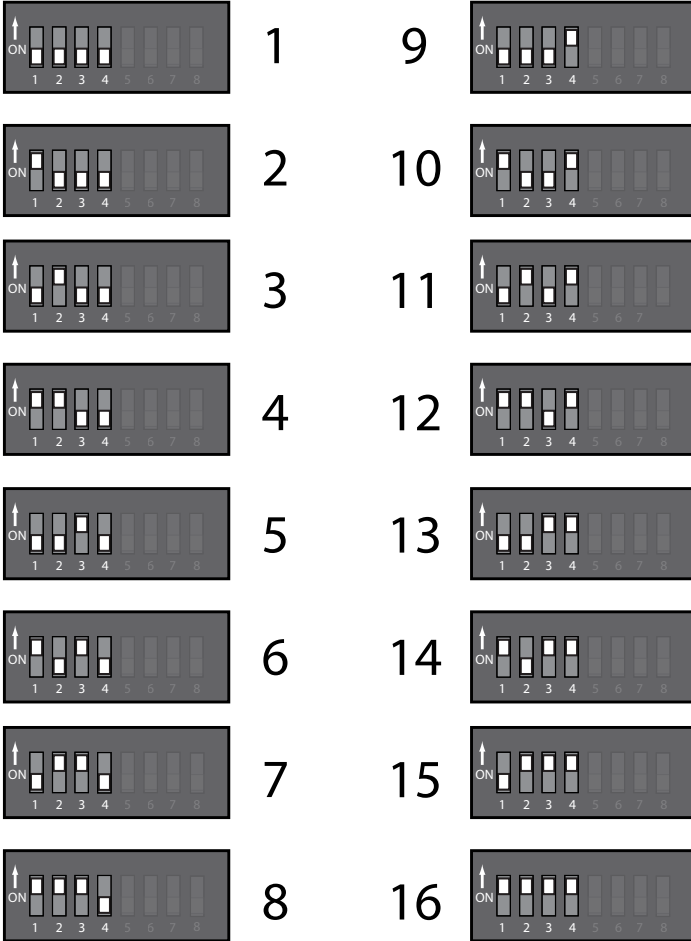

## Receiver Function Switch Positions



Error Checking Disabled



Error Checking Enabled (Default)

 


AB Model Lamp Track Enabled



AB Model Lamp Track Disabled

## Transmitter Function Switch Positions



Disable Group at Low Dial Position



All Groups Fire at Low Dial Position



Disable Level Updates



Enabled Level Updates (Default)

### Receiver Group Switch Positions



Group 1 (A)



Group 2 (B)




Group 3 (C)




No Group

### Level Dial Scale Calibration

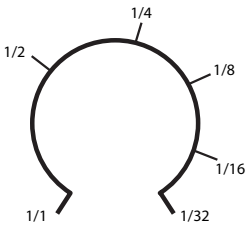

EZset Studio

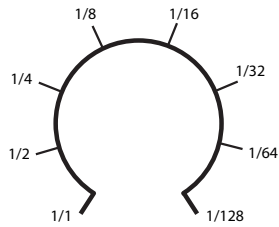

EZset Strobe

# Advanced Operation

---

## Option Switch Operation

### JrX Transmitter

**Radio Channel (switches 1-4)** – The radio channel on your JrX Transmitter is set by the positions of the first four switches. It is not so much important that you know what combination of switches creates a given channel, just make sure to match the on/off pattern of the first four switches on your JrX Transmitter and JrX Receivers. This will ensure that all units are on the same channel. Note that there are 16 total radio channels.

**Disable Group at Low Dial (switch 5)** – The Disable Group at Low Dial switch is used in conjunction with JrX Receiver units connected using the EZset system. The default position, OFF or “0”, will cause any strobes to fire at their lowest output power when the JrX Transmitter’s power dial is set to its lowest position. When the Disable Group at Low Dial switch is turned ON, or “1”, any attached strobes will not fire when a JrX Transmitter power dial is set to its lowest position. In this mode, as soon as the power dial on the JrX Transmitter is turned slightly above its lowest setting, the strobe will begin to fire at its lowest setting. This mode is beneficial when you would like to quickly turn off lights on a certain group by simply turning the adjustment dial to minimum power.

**Disable Level Updates (switch 6)** – The Disable Level Updates switch is used in conjunction with JrX Receiver units using the EZset system to remote control power levels of various lighting devices. The default value of OFF, or “0”, has Level Updates enabled. While Level Updates are enabled, any changes made on the group control dials will be immediately sent to any JrX Receiver units. When the Disable Level Updates switch is changed to the ON or “1” position, Level Updates will no longer be sent. This mode may be beneficial when a photographer is shooting with an assistant. The assistant may have level updates disabled yet still be able to fire at the levels that the main photographer is controlling. Note that when this switch is turned from ON to OFF, the levels of the dials are immediately read and sent to JrX Receiver units. It is thus possible to also use this as a “safety” switch to lock in set lighting while still being able to send occasional updates if minor level corrections are desired.

### JrX Receiver

**Radio Channel (switches 1-4)** – Same setup procedure as the JrX Transmitter

**Group Setting (switches 5-6)** – Groups can be set according to the positions of switches 5 and 6. See diagram to determine appropriate group setting. Note that the “No Group” setting will simply take the Receiver out of all groups to enable the strobe to be set manually, while still triggering.

# RadioPopper JrX Radio Wireless System

---

**Disable Error Checking (switch 7)** – The JrX Receiver performs error checking on all radio messages. This ensures that background radio signals do not cause the JrX to false trigger. In nearly all situations error checking should remain enabled (switch 7 is OFF or “0”) which is the default setting. There are two situations where it may be desirable to disable error checking (switch 7 on ON or “1”).

Operation at the edge of radio range: The radio signal is a stream of digital 1’s and 0’s. Near the edge of range, there may be some errors in the incoming radio transmission. It is likely that enough of the signal has been received correctly for the JrX to operate, yet a single bit error would cause error checking to disregard the message. By disabling error checking, the receiver may still activate even if the signal has some bit errors.

Operation with certain Canon bodies and certain lights at 1/250 shutter speed: RadioPopper has observed that a small number of Canon camera bodies when triggering a small number of studio strobes at the max x-sync of 1/250 can produce shots with a very faint, almost unnoticeable shadow from the camera shutter on the bottom of the frame. By disabling error checking, the remote light will activate more quickly and this effect will be eliminated.

Note that a negative effect of disabling error checking is that the JrX Receiver may occasionally false trigger due to background radio noise. As false triggering is a “negative” effect, error checking should always be enabled except in the two circumstances indicated.

**Modeling Lamp Tracking (switch 8)** – The JrX Receiver is attached to an Alien Bees, White Lightning or Zeus strobe using the EZset function, a user may or may not want the strobe’s modeling lamp to track with the power adjustment. The default position of switch 8 is ON or “1” in which modeling lamp tracking is enabled. Changing to the OFF or “0” position will turn off tracking. NOTE: When turning off tracking is desired, you must also turn off tracking on the strobe control panel. You may observe that the modeling lamp still slightly changes with tracking disabled which is normal and is an effect due to electrical coupling inside the controlled light.

IMPORTANT NOTE: If Modeling Lamp Tracking is desired, switch 8 must be turned ON. Additionally, you must set (turn “on”) the model lamp tracking button on the rear controls on the light itself.

## Battery Level Check / Alarm

Both the JrX Transmitter and Receiver units include a battery level indicator and low battery level alarm. The supplied battery should provide 40-50 hours of continual “on” time regardless of the number of shots taken. When the JrX units are turned on, or when the power button is tapped one time, the unit will indicate the battery level by strobing the green power light. The power light will strobe fast for full battery, half speed for mid-battery and very slowly for a low-battery. Approximately 2 hours before batteries are completely dead, the power light will begin to blink slowly. During this blinking the units will still operate normally at full speed and full power with no noticeable loss of range, however, it is recommended to replace the battery as soon as possible.



# EZset Operation

---

## EZset Operation

**EZset Studio** – EZset Studio enables the ability to adjust the power levels of Alien Bees, White Lightning and Zeus brand lights from a JrX (or PX) Transmitter. After setting the appropriate option switches (see option switches section), the three dials on the side of a JrX transmitter can control the output power of up to three groups of lights. Note that turning the dial of the JrX transmitter is directly proportional to adjusting the power slider on the back of the light. For example, a half turn of the dial is the same as putting the light's slider half-way to full.

To properly set up the EZset Studio system with a JrX Receiver, please follow the correct installation procedure.

1. Ensure that the JrX Receiver and the studio light are both turned OFF.
2. Attach the JrX Receiver to the studio light with the supplied "telephone" data cable.
3. Disable the optical slave function of the light by inserting the supplied 3.5mm plug into the light's sync port.
4. Power on the studio light.
5. Power on the JrX Receiver. JrX Receiver must be powered on after the studio light to enable proper tracking.
6. When the JrX Receiver is turned on, the modeling lamp should quickly ramp up then down and then trigger once.

**EZset Strobe** – EZset Strobe enables the ability to adjust the power levels of TTL / "Dedicated" flashes compatible with Canon or Nikon Cameras. The RPCube Canon is required for Canon compatible strobes and the RPCube Nikon is required for Nikon compatible strobes. Use the supplied 3.5mm stereo cable to connect the sync connector of the JrX Receiver to the matching 3.5mm jack provided on the RPCube.

After setting the appropriate option switches (see option switches section), the three dials on the side of a JrX transmitter can control the output power of up to three groups of strobes. Note that EZset Strobe can control roughly 8 stops of flash power. Each 1/8th turn of the dial on the JrX Transmitter will represent 1 stop of flash power. Note that due to the wide variety of flashes available, each 1/8th turn may be slightly greater or slightly less than 1 stop of flash power.

The EZset Strobe function has been approximately calibrated for stop accurate light output from a Nikon SB-800 Speed Light. Though smaller or larger strobes may put out more or less power, a 1/8 turn of the dial will still roughly equal one stop of power adjustment regardless of the make, model, or size of strobe used.

**NOTE:** It is possible to mix both EZset Studio and EZset Strobe functionality within the same lighting system. For example, placing studio strobes (EZset Studio) on one group and placing hand held strobes (EZset Strobe) on another group. It is also possible to mix the above functionality with proper ETTL/iTTL functionality when used with a RadioPopper PX Transmitter. The ETTL/iTTL pre-flash and calculations are all performed before activating lights attached to JrX Receiver units, thus the lights attached to JrX Receiver units will not alter the ETTL/iTTL exposure. All ETTL/iTTL groups, ratios, and power levels are maintained.

# RadioPopper JrX Radio Wireless System

---

RadioPopper is manufactured in the USA by Leap Devices, LLC. RadioPopper and EZset are trademarks of Leap Devices, LLC.

Canon is a registered trademark of Canon Inc. in the United States and may also be a registered trademark or trademark in other countries. ITTL stands for Intelligent Through The Lens, the trade-marked name for Nikon's exposure measurement system on SLR cameras. Nikon is a registered trademark of Nikon Corporation. Alien Bees, White Lightning, and ZEUS are manufactured by Paul C. Buff, Inc.

RadioPopper and Leap Devices, LLC does not represent or otherwise endorse the 3rd party companies or products discussed in this manual.

All other product and brand names are trademarks of their respective owner.

---

## EU DECLARATION OF CONFORMITY

We, **Leap Devices LLC**  
**501 SE Columbia Shores Blvd. Ste 100**  
**Vancouver, WA 98661**

declare, under our sole responsibility, that the product:

**RadioPopper JrX Transmitter CE Version and RadioPopper JrX Receiver CE Version,**  
to which this declaration relates is in conformity with the following standard(s) or other  
normative document(s):

**EMC:** EN 301 489-1:2008, EN 301 489-3(2002-08)

**Radio:** EN 300 220-1:2006, EN 300-220-3:(2000-09)

**Safety:** EN60950-1:2001, EN60825-1:2001

in accordance with the provisions of the following council directives:  
Radio Equipment and Telecommunications Terminal Equipment 1999/5EC

I, the undersigned, hereby declare that the equipment specified above conforms to the  
listed directive and standards.

Place of Issue: Vancouver, WA; USA

Date: June 6, 2012

A handwritten signature in black ink, appearing to read "Kevin J. King", is written over a horizontal line.

Kevin J. King  
Director of Engineering  
Tel: +1 360 713-0776

# Limited Warranty

---

## LIMITED WARRANTY

The Limited Warranty set forth below is given by Leap Devices LLC (hereafter "Leap") in the United States with respect to the RadioPopper JxX Transmitter and / or RadioPopper JxX Receiver packaged with this Limited Warranty and identified by model number within this Limited Warranty (each a "Product") when purchased and used in the United States or in Canada.

This Limited Warranty is only effective upon presentation of this warranty card and proof of purchase.

A Product, when delivered to you in new condition in its original container at the point of its initial retail sale, is warranted against defects in materials or workmanship as follows: for a period of one (1) year from the date of original purchase, defective parts or a defective Product returned to Leap or its authorized service providers, and proven to be defective upon inspection, will be repaired with new or comparable rebuilt parts or exchanged for a refurbished Product, as determined by Leap or the authorized service provider, in their sole discretion. Replaced parts and exchanged Products will become the property of Leap.

When returning a Product for warranty service, the shipping charges must be prepaid and the Product should be shipped in its original container, or an equivalent, properly packaged container to withstand the hazards of shipment and fully insured. A copy of this warranty card and proof of purchase should be enclosed, as well as a description of the problem. Repairs will be made and the Product will be returned, shipped at NO CHARGE, within the country of repair. The Product must be received for warranty service by Leap before the expiration of this Limited Warranty.

This warranty only covers defective materials or workmanship encountered in normal use and service of a Product and does not apply in the following cases:

- (a) If a circuit board is removed from the plastic enclosure for any reason or if the original factory seal between the circuit board and plastic enclosure is disturbed in any way. Tampering with or removing the circuit board from the enclosure VOIDs this warranty.
- (b) Loss or damage due to neglect and/or abuse causing deterioration, mishandling, accident or failure to follow operating instructions including but not limited to operation of a JxX Transmitter with no antenna attached, or operation with an antenna other than that provided with the product originally, or inserting the batteries backward for any length of time.
- (c) If a Product is defective as a result of leaking batteries or damage due to water or other liquid, or any environmental conditions.
- (d) Defective materials or workmanship where the defect is due to a Product having been serviced or modified by other than Leap or a Leap authorized service provider.
- (e) Malfunction resulting from the use of accessories, attachments, supplies, parts or devices (including, without limitation, batteries) that do not conform to Leap specifications.
- (f) Damage resulting during shipment. (Claim must be presented to and examined by the shipper).
- (g) Damage or service resulting from modifications or alternations to a Product in any way (including any alteration or removal if its serial number or identification marks).

NO IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, APPLIES TO A PRODUCT AFTER THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON OR ENTITY WITH RESPECT TO A PRODUCT SHALL BIND LEAP (SOME STATES AND PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU). LEAP SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, INCONVENIENCE, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OR CORRUPTION OF DATA, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, ANY LOSS OF FILM OR DIGITAL IMAGE FILES) CAUSED BY THE USE OR MISUSES OF, OR INABILITY TO USE, A PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF LEAP HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL RECOVERY OF ANY KIND AGAINST LEAP BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY LEAP AND CAUSING THE ALLGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE OR MISUSE OF, OR INABILITY TO USE, THE PRODUCT NOT CAUSED SOLELY AND DIRECTLY BY THE NEGLIGENCE OF LEAP (SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU). THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF A PRODUCT, OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT AND STATES YOUR EXCLUSIVE REMEDY.

Leap Devices LLC, 501 SE Columbia Shores Blvd. Suite #100, Vancouver, WA 98661

